

NO.	PART NO.	PART NAME	NO.	PART NO.	PART NAME
•1A	AR230-01A	Standard Nosepiece, 4.0 mm or 5/32"	• 31	AR230-31	Positioning Screw
•1B	AR230-01B	Standard Nosepiece, 4.8/5.0 mm or 3/16"	32	AR230-32	Noise Silencer
•1C	AR230-01C	Standard Nosepiece, 6.0 mm	33	AR230-33	Noise Silencer Lock Nut
•1D	AR230-01D	Standard Nosepiece, 6.4 mm or 1/4"	• 34	AR230-34	Lock Nut O-Ring
•1E	AR230-01E	4.0 †HSS Nosepiece for High Strength Structural (HSS) Blind Rivet, 4.0 mm or 5/32"	• 35	AR230-35	Oil Cylinder Lock Nut
			36	AR230-36	Trigger
•1F	AR230-01F	4.8 †HSS Nosepiece for High Strength Structural (HSS) Blind Rivet, 4.8/5.0 mm or 3/16"	37	AR230-37	Trigger Link
			38	AR230-38	Trigger Lever
•1G	AR230-01G	6.4 †HSS Nosepiece for High Strength Structural (HSS) Blind Rivet, 6.4 mm or 1/4"	• 39	AR230-39	Upper Link Pin
			• 40	AR230-40	Lower Link Pin
1H	AR230-01H	Optional *Monobolt Nosepiece, 4.8/5.0 mm or 3/16"	• 41	AR230-41	Trigger Pin
1K	AR230-01K	Optional *Monobolt Nosepiece, 6.4 mm or 1/4"	• 42	AR230-42	Lever Pin
2	AR230-02	Head	36AY	AR230-36AY	Trigger Assembly (36-42)
3	AR230-03	Front Jaw Case, Quick-Change Type	• 43	AR230-43	Valve Pusher Upper O-Ring
• 4	AR230-04	Jaws, 3-PC Type	44	AR230-44	Valve Pusher
• 5	AR230-05	Jaw Pusher, for 3-PC Jaws	• 45	AR230-45	Valve Pusher Lower O-Ring
• 6	AR230-06	Jaw Pusher Spring	• 46	AR230-46	Valve Pusher Spring
7	AR230-07	Rear Jaw Case, Quick-Change Type	• 47	AR230-47	Valve Sleeve O-Ring
8	AR230-08	Lock Ring, Quick-Change Type	48	AR230-48	Valve Sleeve
9	AR230-09	Lock Ring Spring, Quick-Change Type	• 49	AR230-49	Valve Ball O-Ring
10	AR230-10	Lock Washer	50	AR230-50	Valve Ball
11	AR230-11	Lock Nut	• 51	AR230-51	Valve Spring
3AY	AR230-3AY	Jaw Case Assembly (3-11), Quick-Change Type	• 52	AR230-52	Valve End Cap O-Ring
•12	AR230-12	Oil Cylinder O-Ring	53	AR230-53	Valve End Cap
•13	AR230-13	Oil Cylinder Back-up Ring	44AY	AR230-44AY	Valve Assembly (43-53)
14	AR230-14	Oil Cylinder	• 54	AR230-54	Buffer Ring
15	AR230-15	Sealing Washer	• 55	AR230-55	Air Piston Ring
16	AR230-16	Oil Screw Plug	56	AR230-56	Air Piston Rod
17	AR230-17	Oil Piston	57	AR230-57	Air Piston
•18	AR230-18	Oil Piston O-Ring	58	AR230-58	Air Piston Lock Nut
•19	AR230-19	Oil Piston Back-up Ring	57AY	AR230-57AY	Air Piston Assembly (54-58)
17AY	AR230-17AY	Oil Piston Assembly (17-19)	• 59	AR230-59	Air Cylinder End Cap O-Ring
•20	AR230-20	Large Return Spring	60	AR230-60	Air Cylinder End Cap, With Patented Rivet Size Hole Gauge Design™ and Nosepieces Storage Design™
•21	AR230-21	Small Return Spring			
•22	AR230-22	Hanging Bracket O-Ring	• 61	AR230-61	Air Inlet End Cap O-Ring
23	AR230-23	Hanging Bracket	62	AR230-62	Air Inlet End Cap
24	AR230-24	Oil Cylinder End Cap	63	AR230-63	Grip
•25	AR230-25	Oil Cylinder End Cap Front O-Ring	• 64	AR230-64	Brush
•26	AR230-26	Oil Cylinder End Cap Rear O-Ring	• 65	AR230-65	Wrench 7724
•27	AR230-27	Spent Mandrel Container	• 66	AR230-66	Wrench 2712
•28	AR230-28	Oil Cylinder O-Ring	• 67	AR230-67	Oil Bottle (without Oil)
•29	AR230-29	Oil Cylinder Back-Up Ring	• 68	AR230-68	Hydraulic Oil Injector (without Oil)
30	AR230-30	Air Cylinder			

REMARKS: 1) • Means wearing parts or possible missing parts.

2) Order Example: AR230-04 Jaws 3-PC Type, 5 sets.

3) *Monobolt is a registered trademark of AVDEL.

4) †HSS Nosepieces are for setting High strength Structural (HSS) Blind Rivets.

5) Part No. 35 Oil Cylinder Lock Nut needs to replace a new one after repeated fastening 3 - 4 times.

6) Part No. 34 Lock Nut O-Ring needs to replace a new one when dismantling

Part No. 36 Oil Cylinder Lock Nut.